

PANASONIC TELEPHONE TDA 30 **TIME CHANGE INSTRUCTIONS**

PROGRAM 000

TIME AND DATE

000

ENTER PROGRAMMING MODE:

Note: Please refer to your programming template (if you have one) that indicates the changes in keys when programming from your phone.

- ENTER USER PROGRAM NUMBER **000** (TIME AND DATE)
- PRESS **ENTER** SOFT KEY
- ENTER THE **YEAR**
- PRESS **SEL+ SOFT KEY** UNTIL DESIRED MONTH IS DISPLAYED.
- PRESS ~~**ARROW**~~ → SOFT KEY
- ENTER THE **DAY**
- PRESS **NEXT SOFT KEY**
- ENTER THE **HOUR**
- ENTER THE **MINUTES**
- PRESS **SEL+** FOR **AM** OR **PM**
- PRESS THE ~~**ARROW**~~ **NEXT** SOFT KEY
- PRESS **STORE KEY**
- PRESS **END (HOLD)** KEY
- PRESS **PAUSE** OR EXIT SOFT KEY TO EXIT